


Sentispec™

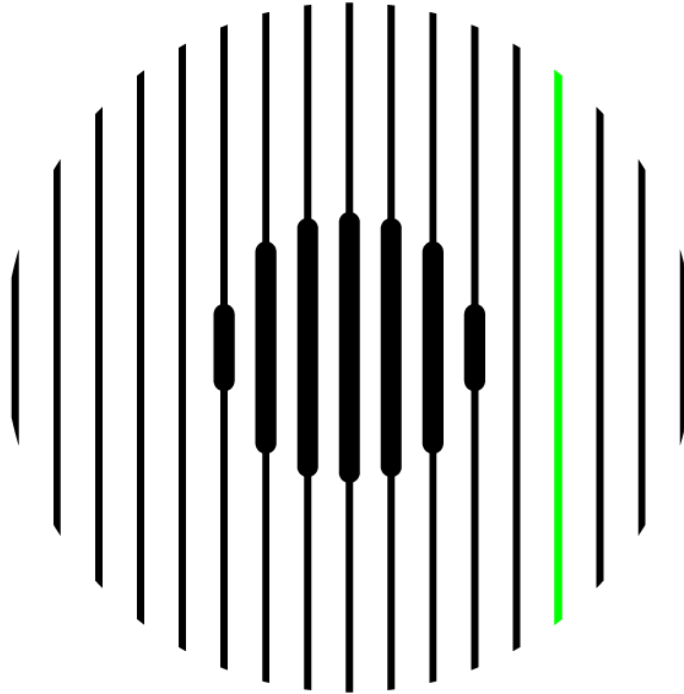

Data visionaries

Driver Manual - Quick Start Guide

Contents

1	Operating Guide for Recording Unit	3
1.1	Start the Recording Unit.....	3
1.2	Record a Section	4

1 Operating Guide for Recording Unit

1.1 Start the Recording Unit

1. Verify the battery level, it should be sufficiently charged. (Figure 1 Recording Unit Control Panel)
2. Power on the device by pressing the Power button. (Figure 1 Recording Unit Control Panel)
3. Log in to the Sentispec user account using the password 123456.
4. Wait for the Sentispec application to fully load. (Figure 2 Control UI)

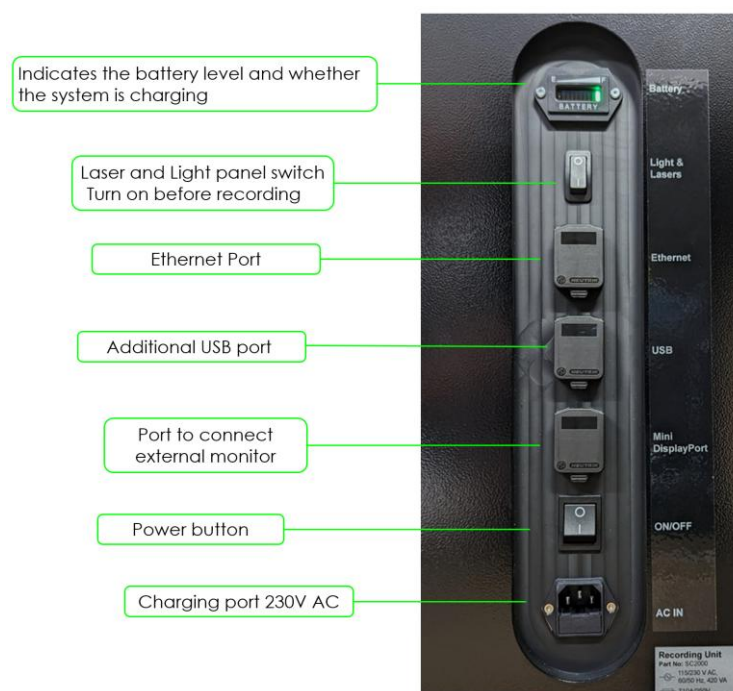


Figure 1 Recording Unit Control Panel

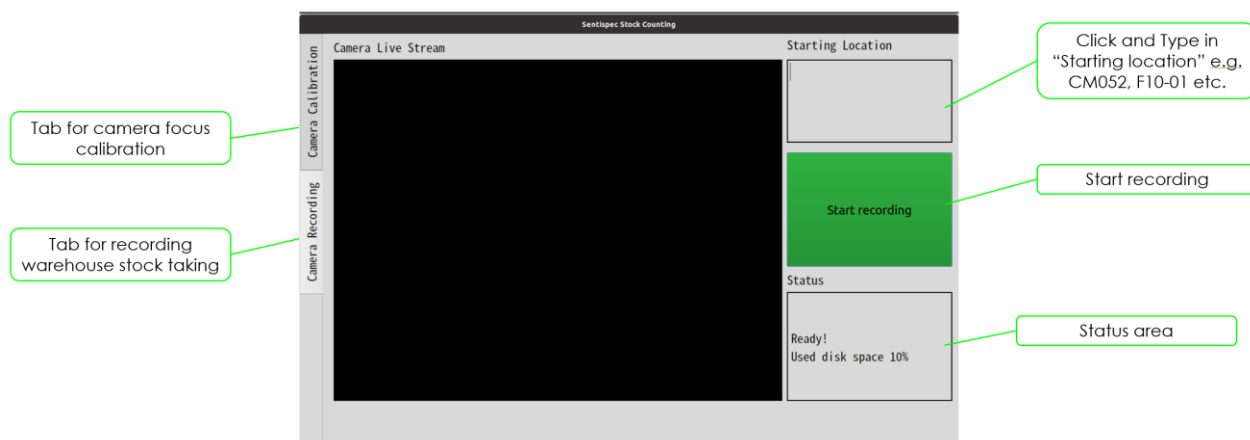


Figure 2 Control UI

1.2 Record a Section

1. Mount the unit securely onto a forklift or OPT.
2. Secure the unit using the provided safety cable.
3. Drive to the desired starting location.
4. Activate the laser and lights using the switch Laser & Lights (Figure 1 Recording Unit Control Panel)
5. Position the unit next to the first pallet — ensure it is not outside the racking system.
6. In the Sentispec Stock Counting Application, enter the starting location.
7. Click "Start Recording." (Figure 2 Control UI)
8. Drive to the end of the rack. (Figure 3 Recording Process)
9. Extend the forks until the next level is within the unit's field of view (FOV). (Figure 3 Recording Process)
10. Return to the starting location and repeat the process for the next level. (Figure 3 Recording Process)
11. Once the section is complete, press "Stop Recording." (Figure 2 Control UI)
12. Wait until the unit status changes to "Ready" before starting a new recording.

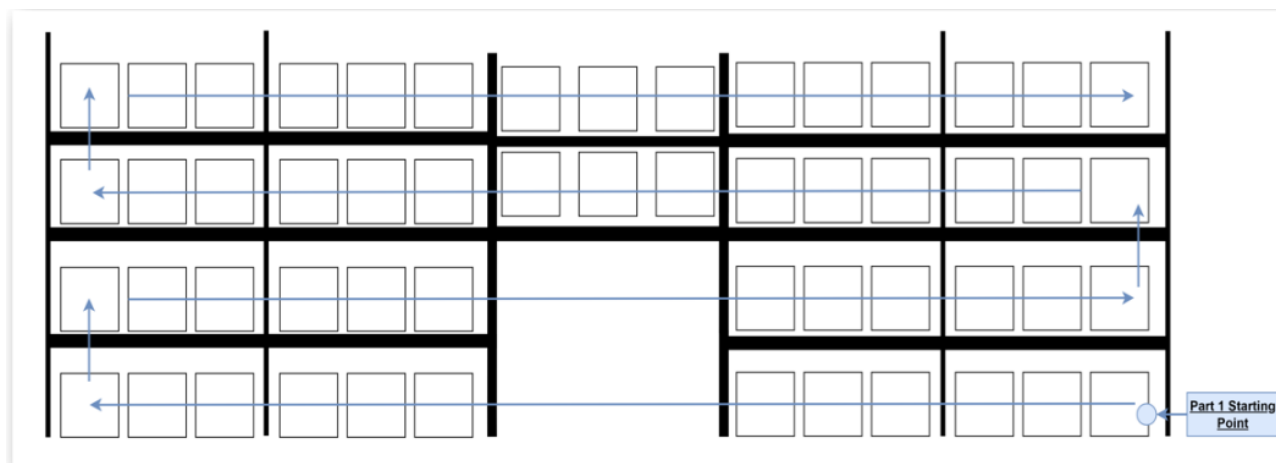


Figure 3 Recording Process