


Sentispec™

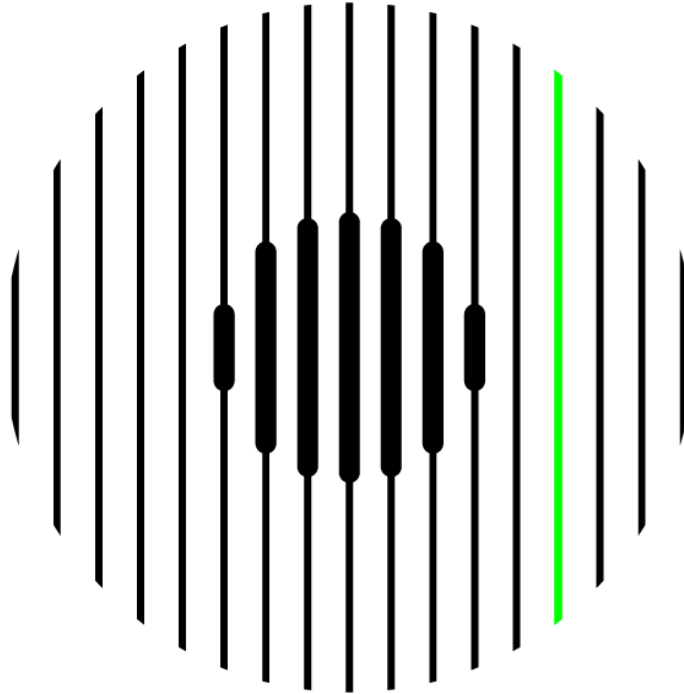

Data visionaries

Admin Manual - Quick Start Guide

Contents

1	Discrepancy Analysis	3
---	----------------------------	---

1 Discrepancy Analysis

1. Connect to Recording User Interface

- Make sure that both recording unit and user's computer are connected to the same network.
- Open a browser and access the device via the provided IP address.

2. Upload WMS Extract

- Provide a WMS extract in a supported format that includes the recorded locations.
- Use the "Upload" option located in the top-right corner of the screen.

3. Prepare for Comparison

- Recordings that have transitioned to the "Ready for Comparison" state can now be analysed against the uploaded WMS extract. (Figure 1 Recording Overview)

4. Check for Discrepancies

- Click "Check Discrepancies" to generate a list of all detected discrepancies for the selected recording. (Figure 1 Recording Overview)

5. Discrepancy Overview

- Figure 2 Discrepancy Overview illustrates the Discrepancy Overview interface, showing detected differences and their status.

6. Inspect a Specific Discrepancy

- To investigate a particular issue, select "Open Recording" from the discrepancy list.

7. Analyse Using the Video Player

- The video player will automatically jump to the corresponding timestamp where the discrepancy occurs.
- Use the zoom, frame navigation, and playback controls to inspect details precisely. (Figure 3 Discrepancy Investigation)

8. Export Options

- At the bottom of the interface, you can:
 - i. Download Recording – saves the annotated video.
 - ii. Export Recording Results – exports raw system data.

iii. Export Discrepancies – exports the discrepancy analysis in various supported formats. (Figure 2 Discrepancy Overview)

9. Maintain Storage Space

- Once analysis is complete, delete unnecessary recordings to free up device storage. (Figure 1 Recording Overview)

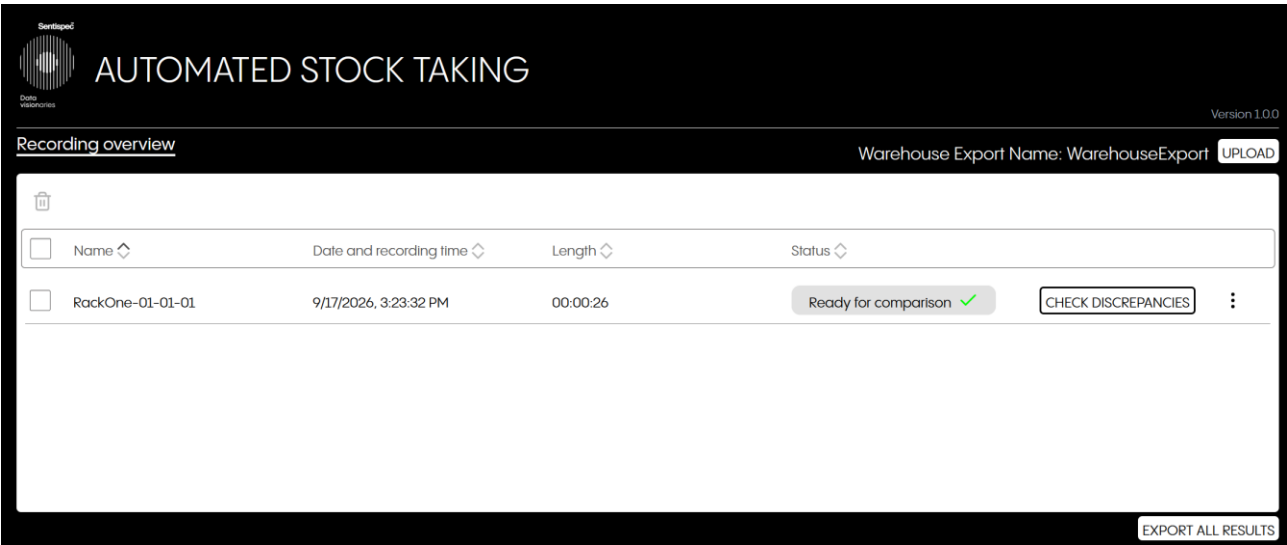


Figure 1 Recording Overview

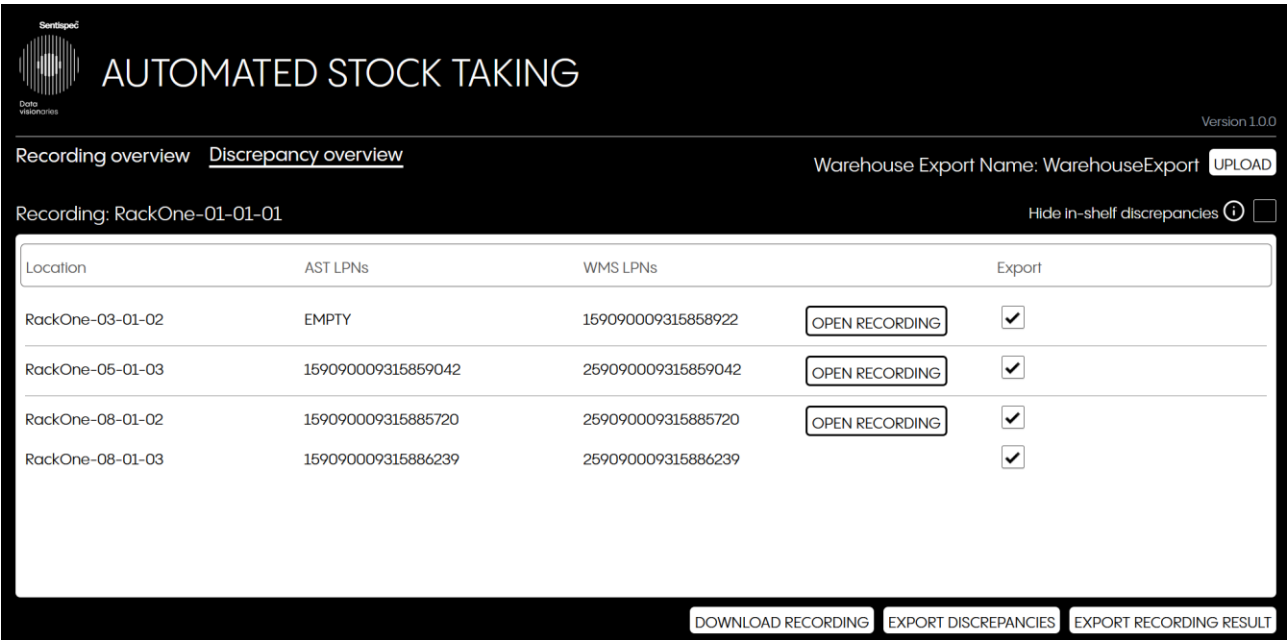


Figure 2 Discrepancy Overview

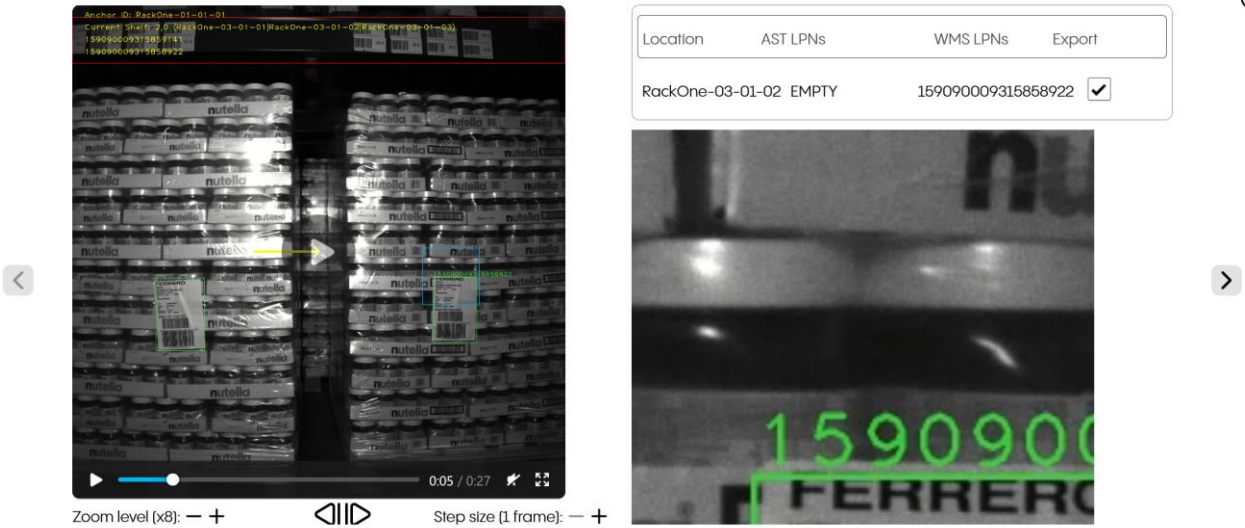


Figure 3 Discrepancy Investigation